
## DOMESTIC TANK INSTALLATION REQUIREMENTS

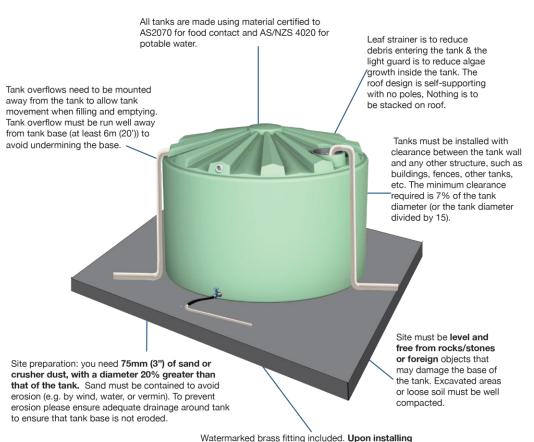

ball valve please ensure flexible pipe is connected to ball valve to allow room for movement and, which will ensure that the tank is not damaged. Ensure that pipe work is well clear of moving vehicles ensuring no damage to tank or fittings. An inline filter must be installed between the tank and the pump to protect appliances connected to pump delivery.

It is the purchaser's responsibility to ensure that the tank is secured immediately following delivery, either by tying down with rope or wire, or by filling to sufficient weight to ensure it is secure.

## Tank Stands: Have to be designed by a engineer

Global Rotomoulding takes no responsibility for the suitability of tank stands. Bearers must have sufficient strength to prevent deflection when the tank is full. Use hardwood decking with a maximum gap of 12mm(1/2'') between slats, or exterior grade plywood. Do not use corrugated iron. Support inlet/outlet pipes from tank stand, and not from tank wall.

• Tank must not be moved from its original installation site.

• Tank installation must comply with local council requirements.

## FAILURE TO COMPLY WITH THE INSTALLATION REQUIREMENTS WILL VOID YOUR WARRANTY.